

Automatic Sailing Timer

1. To switch on press the BLACK button on the righthand side of the unit.
2. Select the correct race programme by pressing the WHITE button until the programme number you want is displayed.

Programme	Count Down	After Start	Typical Use
One RARELY USED	3 2 1 0	Then repeats the complete 3 2 1 0 sequence until stopped.	Thursday evening racing.
Two – Pursuit race	5 4 1 0	Auto sound signals every minute until stopped. Will count up after first start.	Pursuit races.
Three – Handicap race	5 4 1 0	Will count up after start.	Single fleet start. (Sunday and Thursday handicap.)
Four RARELY USED	5 4 1 0	Then repeats 5, 4, 1, 0 sequence until stopped.	

3. Press the RED button to set up for the start sequence. The clock will show the countdown time PLUS 10 seconds.
4. Press the RED button again to start the sequence. Listen to the beeps. After 10 seconds put the class flag up when the first horn sounds automatically.
5. For pursuit races, after the final class start, press the RED and WHITE buttons together. This will allow the count up to continue whilst stopping sound signals.
6. The only way to stop the stopwatch and reset it, is to turn the unit off.
CAUTION – IF THE UNIT IS SWITCHED OFF ALL TIMINGS WILL BE LOST.
7. Pressing the ORANGE button at any time will sound the horn but does not affect the timer in any way. This is useful for individual recalls, shortening courses etc.
8. The push button on the cable is used ONLY for finishing boats. Press the button as each boat crosses the line.
9. If you are unsure on how to operate the unit, speak to the coxswains and they will be able to assist.